

Stealth Cam
STC-ADX / STC-ADXRT
User's Manual



Toll Free Customer Support 1-877-269-8490

www.stealthcam.net

Version 1.0

May/05

STC-ADX / STC-ADXRT

For Customer Service or Warranty Information Call Toll Free

877-269-8490

Stealth Cam, LLC
P.O. Box 211662
Bedford, Texas 76095
www.stealthcam.net

Stealth Cam Limited Warranty

Your Stealth Cam is covered by a One Year Limited Warranty on parts & labor from the date of purchase. The warranty covers defects in workmanship & materials. The warranty does not apply to units, which have been damaged or abused intentionally or unintentionally.

Tampering with or altering the unit will void the warranty. Any unauthorized service will void warranty. Original sales receipt must be produced for any warranty service. Questions call 877-269-8490


www.stealthcam.net Toll Free 877-269-8490

Manual Contents

Camera overview	4
Camera kit contents	8
Battery and memory Installation	9
Using external power	10
Set up and programming terms	13
Using the Camera	22
Manual shooting mode	31
Viewing & Deleting images	33
Memory compatibility chart	43
Technical Specs	44
General Information	47


Camera overview

Front housing image with major parts indication.

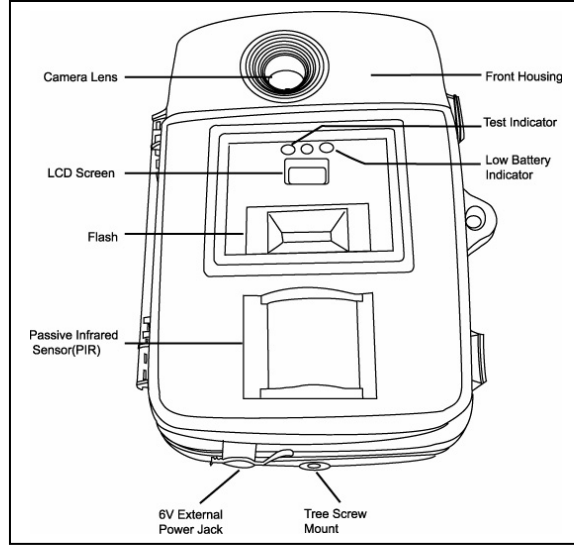


STC-ADX / STC-ADXRT

Open view image with major parts indication

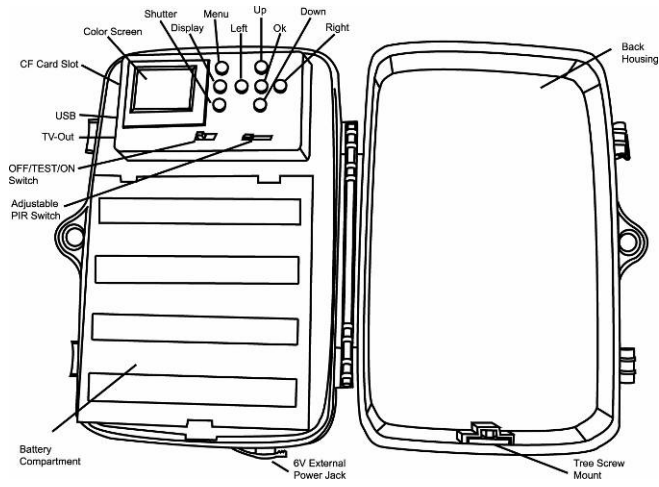

STC-ADX / STC-ADXRT

Side view with major parts indication

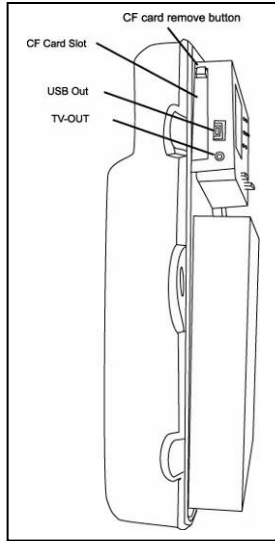

STC-ADX / STC-ADXRT

Picture / Image Capacity

CF card	High	Low	AVI
16MB	45	180	20
32MB	90	360	40
64MB	180	720	80
128MB	360	1440	160
256MB	720	2048	320
512MB	1440	2048	640

NOTE: Picture / Image Capacity Chart provides approximate number of images or AVI movies based on resolution setting and the size of memory card. These figures may vary depending on the amount of detail in the image.

Camera kit contents

- Model STC-ADX or STC-ADXRT Digital Scouting Camera
- CDROM (Contains Lover's Eye image editing software and camera driver)
- User Manual.
- USB cable.
- 1.5M TV out cable for TV (RCA Jack).
- 1.5M TV out cable for handheld TV (Mini Jack).
- Strap.
- Tree screw with nut.
- Washer x 2.
- Lock plate

Battery & memory installation

The Stealth Cam STC-ADX or STC-ADXRT Advanced Digital Scouting Camera is designed to operate using two different types of battery power options.

NOTE: Always have camera in **OFF** position when installing or removing batteries.

Batteries “D” cell

The internal battery compartment accepts 8 “D” cell batteries. Be sure to use high quality brand name alkaline batteries. Install batteries in correct polarity (+/-) as noted inside battery compartment.

Using the external power

6V Lead Acid external battery

The STC-ADX and STC-ADXRT is equipped with an external power jack designed to accept a barrel plug cable to attach to a sealed lead acid battery. (sold separately). Battery cable and complete 6V Lead Acid battery kits are available wherever Stealth Cam scouting cameras are sold or call toll free 877-269-8490. Only Stealth Cam external battery accessories are recommended.

- Make sure the camera power switch is **OFF**.
- Insert the battery pack plug into the DC 6V jack of the bottom of camera housing
- Turn the camera power on.

- ❖ ***Please make sure the voltage and polarity (+/-) are correct before connection. Incorrect voltage or polarity (+/-) will damage the camera.***

Memory Options

Your STC-ADX camera is equipped with 16MB built in flash memory, (32MB for STC-ADXRT model). The camera is also equipped with an expandable media card slot capable accepting up to 512MB Compact Flash card (sold separately). With no memory card inserted into the slot, the camera will use the built in 16MB memory (32MB for the STC-ADXRT model). If a Compact Flash card is inserted into the slot then the camera will bypass the built in memory and utilize the compact flash memory. The front counter display will show the number of images on the built in memory unless the expansion card is inserted at which

STC-ADX / STC-ADXRT

point the counter will only show the number of images in the expansion card.

Inserting CF card

Make sure camera is in the OFF position when ever adding or removing memory.

- Insert CF memory card in to the CF card slot completely and in the correct direction as shown by the sticker located at the top of the housing.
 - To remove the CF memory card by press the eject button which is on the upper of the card.
- ❖ ***Compact flash cards must be clean (no images from other sources), if you are using the CF card from other cameras, please make sure to format the CF card prior use in the camera. (See format section on page 17) New cards are good to use straight from the package.***




www.stealthcam.net Toll Free 877-269-8490

Set up and Programming Terms

- **Time out:** To set the amount of time in minutes the camera will sleep between PIR triggering.
- **Auto Flash:** In low light conditions the flash will automatically activate.
- **Capture mode:** The capture mode that you have selected.
 - **1 Shot:** Single image capturing per PIR triggering.
 - **2 Shot:** Two images continuous capturing per PIR triggering.
 - **3 Shot:** Three images continuous capturing per PIR triggering.
 - **AVI:** Taking 10 seconds video per PIR triggering.
 - **Manual:** Manual capturing by pressing shutter button to operate. (use as point and shoot camera or video camera under Test Mode)

www.stealthcam.net Toll Free 877-269-8490

STC-ADX / STC-ADXRT

- **Image Resolution:** The resolution selection that you have selected.
 - **1600** : Select this option to capture a High image resolution.
 - **800** : Select this option to capture a Low image resolution.
- **Image Quality:** The quality selection that you have selected.
 - Economic = Low Quality
 - Normal = Normal Quality
 - Fine = Fine Quality
- **Batteries Status:** It shows the battery status.
 - **Full:** It shows the batteries are full. 
 - **Half:** It shows the batteries are half. 
 - **Low:** It shows the batteries are low and front battery indicator will be on also. 
- ❖ ***When the camera has detected low batteries, (Both set of batteries are lower then 4.5 +/-0.2Volts) the camera unit will power off within 30 seconds automatically. Please***
www.stealthcam.net Toll Free 877-269-8490

STC-ADX / STC-ADXRT

replace with new batteries; otherwise the camera will not work properly.

Precaution: When replacing batteries, replace the upper 4 batteries in the battery compartment with new ones first. After that replace the lower 4 batteries. Removing all 8 batteries at one time will result in the loss of date / time setting.

- **Date and Time:** It shows the date and time that you have set.

Programming the Stealth Cam STC-ADX / STC-ADXRT

Slide the power switch to **TEST** position. You will hear one beep and the Stealth Cam Logo will show on the LCD screen for about one second. Once you hear the second beep, you can press the **MENU** button to start your programming.

You will see the programming screen as follows:

Manual Capture Mode

To set manual capture mode

Press **UP** or **DOWN** button to highlight Manual Capture Mode.

Press **LEFT** or **RIGHT** button to select between Normal Camera capture mode or Movie capture mode.

Press **OK** to confirm your setting

Press Menu to exit setting (*see page 30 for manual mode operating instruction*)



STC-ADX / STC-ADXRT

Or Press **DOWN** button to continue with next setting.

Format Memory

To erase images stored in internal memory or to format a CF card

Press **OK** to confirm format the memory

Press **OK** again to start formatting process (the time it requires to format the memory will only take a few seconds)

Once format is complete, you will automatically exit to camera status screen.

Press **MENU** if you choose not to format the memory and exit to camera status screen.

Press **MENU** to return to program setting.

Press **DOWN** button twice to select Size (resolution) setting

Size (Resolution)

To select image resolution

Press **LEFT** or **RIGHT** button to select high resolution (1600) or low resolution (800)

Press **OK** to confirm setting.

www.stealthcam.net Toll Free 877-269-8490

STC-ADX / STC-ADXRT

Press **MENU** to exit setting

Or press **DOWN** button to continue with the next setting

Quality

To select image quality

Press **LEFT** or **RIGHT** button to select between Fine – Normal – Economic (Low) quality

Press **OK** to confirm your setting

Press **MENU** to exit setting

Or press **DOWN** button to continue with next setting. You will see the next programming screen.

TV (NTSC/PAL)

To select TV out system

Press **LEFT** or **RIGHT** button to select PAL or NTSC.



STC-ADX / STC-ADXRT

(NTSC is the correct setting for all North America. Your Stealth Cam STC-ADX / STC-ADXRT comes pre-programmed for NTSC.)

Press **OK** to confirm setting

Press **MENU** to exit setting

Or press **DOWN** button to continue with next setting

Date Time setting

This camera uses the 24hr military time format.

Press **OK** button to enter into setting mode. You will see this screen



1. Press **UP** or **DOWN** button to choose the month.
2. Press **RIGHT** button to choose date setting.
3. Press **UP** or **DOWN** button to choose the date.
4. Press **RIGHT** button to select year setting.
5. Press **UP** or **DOWN** button to choose the year.
6. Press **RIGHT** button to choose Hour setting.
7. Press **UP** or **DOWN** button to choose the hour.
8. Press **RIGHT** button to choose Minute setting.

www.stealthcam.net Toll Free 877-269-8490

STC-ADX / STC-ADXRT

9. Press **UP** or **DOWN** button to choose the minute.
10. Press **RIGHT** button to choose Second setting.
11. Press **UP** or **DOWN** button to choose the second.
12. Press **OK** to confirm date and time setting and exit to camera status screen.

NOTE: If you press **MENU** before pressing the **OK** button, you will exit the setting menu without confirm the date time setting

Set the Capturing sequence. *The Stealth Cam STC-ADX / STC-ADXRT can be programmed to shoot 1-3 pictures per triggering or 10 seconds of video.*

Stealth Cam Setting

For setting up PIR capture mode

Press **MENU** button to show the program setting screen.

Press **DOWN** button six times to move to Trigger setting.

Press **RIGHT** button to choose the capturing sequence. Your STC-ADX/STC-ADXRT can be programmed to shoot 1-3 pictures per trigger or 10 seconds of video.

Press **OK** to confirm the number of capture mode setting

Press **MENU** to exit setting

Or press **DOWN** button to select desired time out in minutes.

Press **RIGHT** button to increase the time interval by one min

Press **LEFT** button to decrease the time interval by one min

Press **OK** to confirm.

STC-ADX / STC-ADXRT

Once all settings have been completed press the **MENU** button to return to camera status screen.

At any given time you can reset the camera to default setting

From camera status screen, press the **MENU** button once to display the first programming screen.

Press the **UP** button to display the Default setting screen.



Press **OK** button to confirm and return to camera status screen. All your existing program will return to factory default setting and exit to camera status screen.

Using the camera

Once all program setting has been completed your Stealth Cam is ready for field use. Slide the power toggle switch from **TEST** setting mode to **OFF** position if you are not ready to use the camera or slide to


ON position if you are ready to begin scouting.

- ❖ ***Please note that when you power off the camera, the front LCD counter will remain on. This is normal. Do not be alarmed.***

Getting started

Mounting the Camera. It is recommended to mount the camera 4-5 ft off the ground with the camera pointed at a slight downward angle. Be sure to avoid mounting the camera facing east or west as the rising and setting of the sun could produce false triggers and overexposed images. Clear branches and other debris away from the front of the camera so as not to block the camera lens or PIR sensor.


STC-ADX / STC-ADXRT

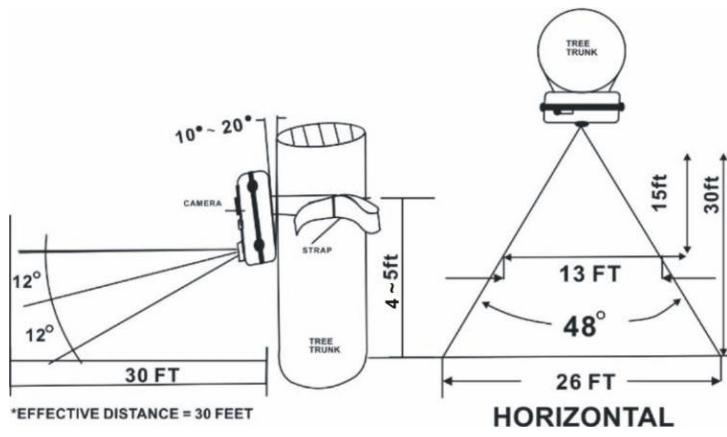

PIR Cover Area

Diagram

Mounting the camera with the supplied Tree Screw

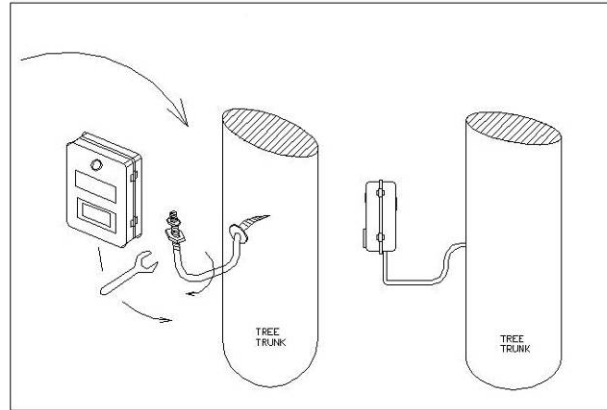


- Hand twist the screw into the tree or post at the desired position.
- Attached the camera to the screw by turning the camera onto the mounting screw to the desired position.

www.stealthcam.net Toll Free 877-269-8490

STC-ADX / STC-ADXRT

- Tighten the stabilizer nut.
- ❖ ***Attached camera to tree screw. Do not over tighten as this may cause damage to camera housing. Using the supplied nut and washer, tighten to the bottom of camera for greater stability.***

Mounting the camera with the supplied strap

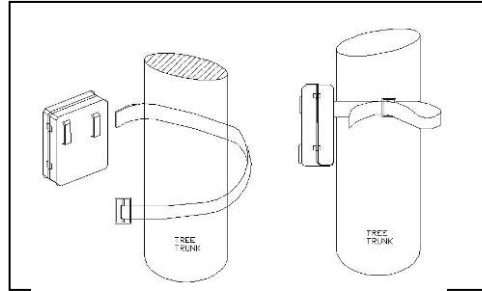

STC-ADX / STC-ADXRT

- Insert the strap through the strap slots on the rear housing.
- Wrap the strap around the mounting surface. Secure the strap and tighten the buckle in order to secure the camera.

Stealth Cam offers a Security Lock Bracket for uses exclusively with this camera. See included accessory card or call toll free 877-269-8490.

- ❖ ***In order to obtain proper weather resistance, please make sure that both door latches are securely locked in place.***

Adjust the PIR coverage distance.

- This Stealth Cam offers the user a variable PIR distance.
- The PIR dial has a near to far designation.
- NEAR is approximately 15ft and FAR is approximately 30ft.

STC-ADX / STC-ADXRT

- Select the desired coverage distance. (see PIR Coverage Diagram on page 24 for reference.)

Testing the camera coverage area

One of STC-ADX / STC-ADXRT Cam's many features is the ability to test the coverage area.

- After mounting the camera, open front housing and slide the power toggle switch to TEST.
- Close the front housing.
- Walk around in the front of the camera to see if you have mounted camera in the proper position. A green indicator light on the front will blink on when you have intruded the coverage area.
- Adjust the camera position as needed and repeat testing until the desired coverage area is achieved.

STC-ADX / STC-ADXRT

- When you have completed the testing the coverage area, open the front housing and slide the power toggle switch from TEST to ON position. This will exit the test mode. The camera will then enter count down mode for 1 minute and front green indicator will start continuous blinking giving you one minute to leave the coverage area. Then the camera will enter PIR detection mode.

Using the camera in PIR detection mode

- Mount the camera to tree or other sturdy object using either two supplied tree screw or mounting strap (Please refer to the mounting suggestions section in this manual)
- Open the front housing and move the switch to the ON position.
- The camera's green test light will begin blinking and enter count down mode. This is your indication to leave the coverage


STC-ADX / STC-ADXRT

area within one minute.

- After one minute the camera will take between 1~3 pictures or a 10 seconds AVI video based on your program setting. The camera will then time out between 1 ~ 60 minutes also based on your setting.
- ❖ ***The time between motion detection and the camera taking the pictures may vary due to lighting conditions, charging of the flash, program setting and battery power level.***
- ❖ ***The flash light will only activate in low light conditions.***
- ❖ ***When the camera is set to AVI capturing, the 10 seconds clips will only turn out well in good daytime lighting conditions.***
- ❖ ***When using the AVI function, the camera cannot use the flash. Time/Date stamp will not appear on the AVI video clips.***


Manual shooting mode

Using manual shoot option for Camera mode

- Slide the power toggle switch to **TEST** position. Wait for 2 beeps.  Icon will show on upper left hand corner of your LCD screen. (see page 16 to on how to set the manual capture mode.)
- Once you hear the 2nd beep, you may point the camera in the direction where you want to capture the image and press **SHUTTER** button once. You will hear two fast beeps after you press the **SHUTTER** button. This indicates the image has been captured and the LCD counter on the front of the housing will update the number of images in memory.
- When taking night time pictures allow approximately 7 seconds between shots to allow the flash to charge. In case of low battery power, it will take longer to charge the flash between

pictures.

Using manual shoot option for AVI mode

- Slide the power toggle switch to **TEST** position. Wait for 2 beeps.  Icon will show on upper left hand corner of your LCD screen. (see page 16 to on how to set the manual capture mode.)
- You may now point the camera in the direction where you want to capture the video and press **SHUTTER** button to start the video recording.
- Press the **SHUTTER** button the 2nd time to stop video recording.
(Note: if you forget to press the SHUTTER button the 2nd time to stop video recording, it will record the video indefinitely until the memory capacity is full or until you power off the camera.)

Viewing and deleting the images

The STC-ADX / STC-ADXRT cam offers the user four different options for viewing the images. The external LCD display screen on the front housing will show the number of images in memory


The instructions below are based on starting from a camera that is turned off.

Viewing the image or AVI clip on the built in TFT LCD screen

- Slide the camera power toggle switch to **TEST**. Wait for Camera image to show up on monitor.
- Press the **OK** button on the camera. This will display the last image captured.
- Using the **LEFT** and **RIGHT** buttons to select the image you wish to view. Image number and total number of image in the

STC-ADX / STC-ADXRT

memory will display on the center bottom of the screen.


- Once you have selected the image you wish to view, press the **UP** button. This will magnify the image on the screen.
- Using **LEFT/RIGHT/UP/DOWN** button, you can navigate the image to display different area of the image. You will be able to read the date/time stamp on the bottom right hand corner of the picture.
- To return to the image selection view from the magnified image screen press the **OK** button.
- For viewing AVI movie clip, (a  movie icon will show on the upper left hand corner of the image), press **SHUTTER** button to view the AVI movie clip.
- Press **OK** button to exit to camera status screen.

**Viewing the image or AVI movie clip on a handheld LCD TV
video monitor (cable included)**

- Attach the appropriate cable to the video out jack on the camera. Insert the other end into the video in jack on handheld LCD TV monitor. Turn on the TV monitor and slide the camera power toggle switch to **TEST**. Wait for Camera image to show up on monitor.
- Press the **OK** button on the camera. This will display the last image captured.
- Using the **LEFT** and **RIGHT** buttons to select the image you wish to view. Image number and total number of image in the memory will display on the center bottom of the screen.
- Once you have selected the image you wish to view, press the **UP** button. This will magnify the image on the screen.
- Using **LEFT/RIGHT/UP/DOWN** button, you can navigate the

STC-ADX / STC-ADXRT

 image to display different area of the image. You will be able to read the date/time stamp on the bottom right hand corner of the picture.

- To return to the image selection view from the magnified image screen press the **OK** button.
- For viewing AVI movie clip, (a  movie icon will show on the upper left hand corner of the image), press **SHUTTER** button to view the AVI movie clip.
- Press **OK** button to exit to camera status screen.

Viewing the images or AVI movie clip on your home TV equipped with an RCA input jack. (cable included)

- Attach the appropriate cable to the video out jack on the camera. Insert the other end into the RCA video in jack on the TV. Turn on the TV and slide the camera power toggle switch to

STC-ADX / STC-ADXRT


TEST. Wait for Camera image to show up on monitor. Make sure to switch to **VIDEO IN mode on your TV. (See your TV owner's manual for directions.**

- Press the **OK** button on the camera. This will display the last image captured.
- Using the **LEFT** and **RIGHT** buttons to select the image you wish to view. Image number and total number of image in the memory will display on the center bottom of the screen.
- Once you have selected the image you wish to view, press the **UP** button. This will magnify the image on the screen.
- Using **LEFT/RIGHT/UP/DOWN** button, you can navigate the image to display different area of the image. You will be able to read the date/time stamp on the bottom right hand corner of the picture.
- To return to the image selection view from the magnified image

www.stealthcam.net Toll Free 877-269-8490

STC-ADX / STC-ADXRT

screen press the **OK** button.

- For viewing AVI movie clip, (a  movie icon will show on the upper left hand corner of the image), press **SHUTTER** button to view the AVI movie clip.
- Press **OK** button to exit to camera status screen.

Viewing images by computer download

The Stealth Cam STC-ADX / STC-ADXRT advanced Digital Scouting Camera is a plug and play USB storage device. This means users of Windows 2000 / ME / and XP operating system need not install the camera driver. This camera is not MAC compatible. The disc included in this package contains the camera driver for older operating systems as well as Lover's Eye photo imaging software for image enhancement and manipulation.

Attention:

The software CD-ROM packaged with the camera is designed for PC's only (not MAC compatible). Playing this CD-ROM on a stereo or CD player may cause damage to it.


Software installation

- Unplug the USB cable from PC.
- Insert the CDROM in CD driver of your PC.
- The auto-run program will execute.
- Follow the instructions shown on screen from your PC to completely install the driver and application program.
- Restart windows.
- Successful installation will create "Lover's Eye" photo imaging icon on you desktop.
- Connect your camera to the PC using the USB cable provided,

STC-ADX / STC-ADXRT

the PC will recognize the new device and set UP the configuration of the PC automatically.

- **NOTE: Users of Windows 98SE or earlier must install camera driver prior to connecting the USB cable.**

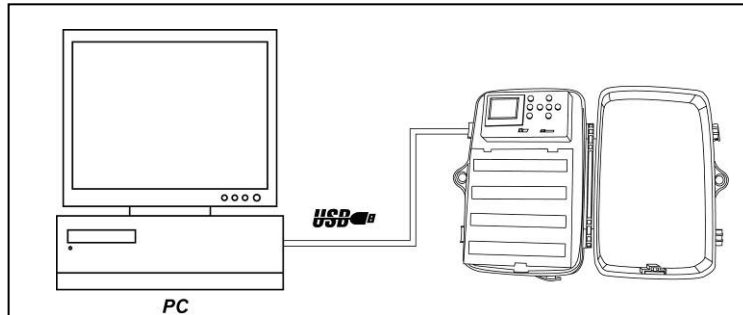

- If your computer doesn't run automatically, please click "Start" button and choose "Run", and then browse the CD drive and click "Setup".

www.stealthcam.net Toll Free 877-269-8490

STC-ADX / STC-ADXRT

- Operation manual of Lover's Eye Photo Imaging software is contained on the provided CDROM.

Viewing the images on your computer using the provided software

Please refer to Installation section on above to install the software and application program properly.

- Slide the power switch to **TEST** location and wait for 2 beeps.
- To view the images simply plug one end of the USB cable into an available USB port on your computer.
- Plug the other end of USB cable into the camera.
- Your computer will recognize the camera as mass storage device and found under MY COMPUTER.

Deleting images

At any time while viewing images on the built in TFT LCD screen, Handheld TV or Home TV you may delete images one at a time or all at once.

- While viewing images in normal view press **MENU** to enter the **DELETE** menu.
- Using the **LEFT** and **RIGHT** buttons to choose desired function. Delete 1 or Delete ALL.
- Press **OK** to enter delete mode.
- Press **OK** again to confirm deleting image or **MENU** to exit without deleting images.

After selection has been made the screen will go back to image view mode.

STC-ADX / STC-ADXRT

CF Card Compatibility Chart

The following cards have been tested and approved for use in the STC-ADX / STC-ADXRT model.

Digital Media	256 MB
Viking	256 MB, 512 MB
PNY	256 MB, 512 MB
San Disk	64 MB, 128 MB, 256 MB, 512 MB
Kingston	512 MB
MUSE	64 MB, 128 MB

Technical Specifications

System Requirements and Compatibility

- Windows 98SE (with driver), 2000/NT, Me, XP.
- Pentium 200MHz or above.
- 64MB SDRAM or above.
- VGA Video Card with 32MB RAM for minimum, Color 16 bit or higher.
- An available CDROM driver and an available USB Port.
- 300 MB free hard disc space.
- Optional: Windows compatible sound card, Microphone and speaker.

❖ ***If you have any questions regarding your PC specifications please call your PC manufacturer.***

Camera Features and Specification.

- Image sensor: 2.0 mega-pixels RGB color.
- Built in 1.8" Color TFT LCD display.
- Built in 16M flash memories for image storage or 32MB for STC-ADXRT.
- External memory support: CF memory card up to 512MB
- Resolution Options: High (1,600) , Low (800)
- Quality Options: Economic (Low), Normal, Fine
- 4 Capturing Options:
 - Manual : Single or Video (AVI)
 - PIR activate : 1,2,3 Continuous or Video (AVI)
- Image performance for video stream: 10fps in 320 x 240 pixels, approx 10 seconds per section.
- Auto white balance and auto expose.
- Auto Flash light strobe control.

www.stealthcam.net Toll Free 877-269-8490

STC-ADX / STC-ADXRT

- Real time clock for date and time stamping.
- 4 digits LCD Image counter.
- Battery low indicator.
- Green Test LED indicator
- TV out support for NTSC and PAL system.
- Focusing: 3M to Infinity.
- High precision 3P glass lens with IR coating.
- Effective viewing Angle: 52 deg.
- PIR detection angle 45 deg.
- Adjustable PIR detection range up to 9 meter.
- Low power consumption:
 - Standby current: < 5 mA
 - Capture current <250 mA
- Interface type: USB 1.1.

STC-ADX / STC-ADXRT

- Power: D size alkaline Batteries x 8. (not included)
- Ext power: 6 volts battery pack. (not included)
- Image format: Standard JPEG. And Motion JPEG (AVI)

General Information

Storing conditions

- Operating Environment: 14 to 104 deg F (-10 to 40 deg C). 20-85% relative humidity, non-condensing.

Special care instructions!!

- The camera is designed to be weather resistant. Never attempt to immerse the unit to water or any other liquid. This will damage the unit and void the warranty.
- Use a soft lens cloth for cleaning lens. Avoid touching lens with fingers.
- Remove dirt or stains with a soft cloth dampened with water or
www.stealthcam.net Toll Free 877-269-8490

STC-ADX / STC-ADXRT

neutral detergent. Keep the camera in a dry and cool dust-free environment or container when it is NOT used.

- Take the batteries out, when the camera is NOT to be used over a long period.
- Avoid dropping the camera on to hard surfaces. Do not disassemble the camera.
- Do not mix new and old batteries.
- Do not open the camera for unauthorized service. This could cause serious damage to the unit and will void the warranty.

This camera is a precision electronic device. Do not attempt to service this camera yourself, as opening or removing covers may expose you to dangerous voltage points or other risks.